



DESIGNED BY
EASY
INSTALLATION
FITTERS FOR




1200 - 1600mm
Flat Roof
Canopy Porch
Fitting
Instructions

Important Information

All components should be inspected BEFORE installation commences for any damage and to check all your items are correct before installation. While care is taken to match our engineered timber products, timber is a natural product where the colour, grain structure, can vary.

While we do everything possible to ensure the information contained within these fitting instructions are correct, they are only a general guide, every situation is different. Please read through the fitting instruction fully before commencing any fitting, Cheshire Mouldings will not be held responsible for any mistakes made through incorrect fitting. You will need to take extra care when installing pre-finished components and some touching up will undoubtedly be necessary around the cut areas.

Components

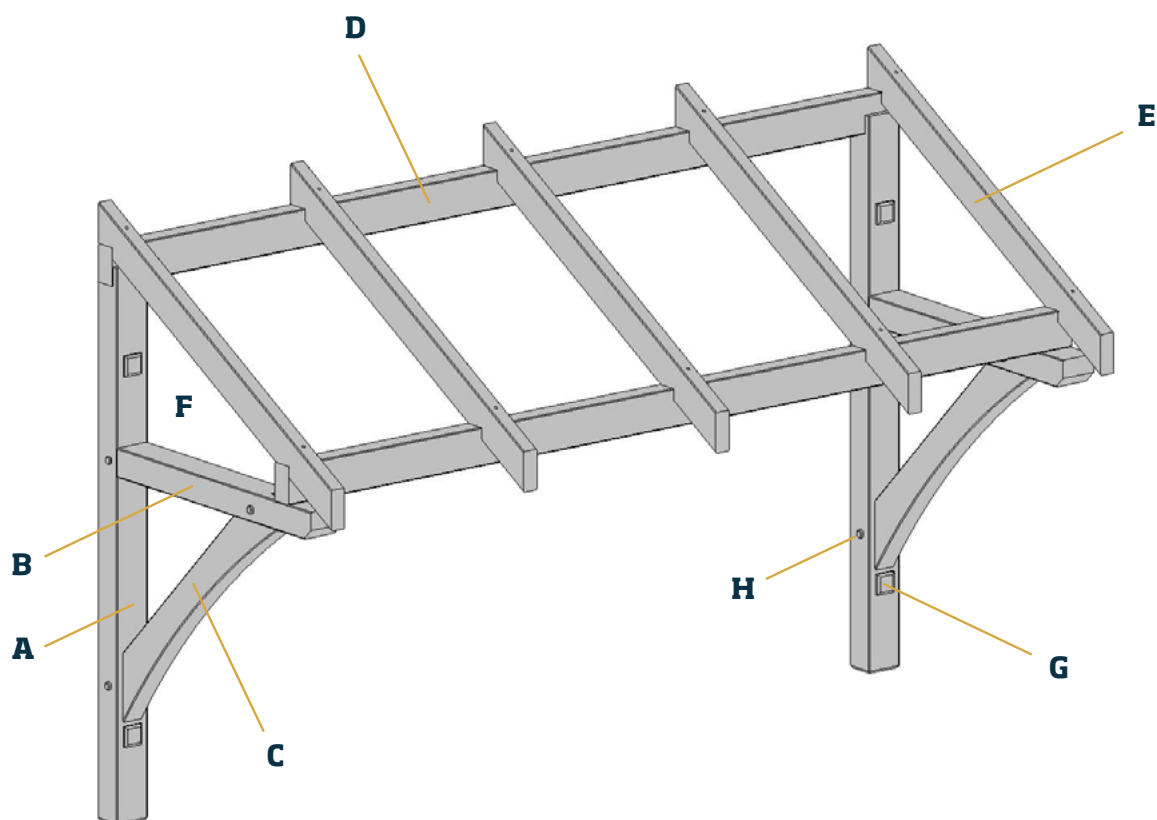

When positioning the Gallows Brackets, please note that Porch003 has a max internal span of 1600mm between brackets **(Fig 1)**.

Note: Cheshire Mouldings Porch Canopies do allow for adjustability of the upright position to less than max span, taking into account any unique features around the door.

Assemble the Gallows Brackets using exterior grade wood glue.

Knock the 15mm diameter dowels supplied into the pre-machined draw-bored tenons **(Fig 2)**.

Measure and mark Gallows Brackets positions on the wall, taking care not to exceed max span of 1600mm **(Fig 3)**.

Measure and mark the back purlin at the preferred location above the door **(Fig 4)**.

Place and secure the assembled Gallows Brackets to either side of the door to the marked positions on the wall. Fix using 2 x 12mm dia steel bolts (not supplied). Glue the cover caps to hide fixings **(Fig 5)**.

Offer back purlin behind tops of Gallows Brackets. Secure to wall with minimum of 2 x 12mm dia steel bolts (not supplied) **(Fig 6)**.

To establish correct location for front purlin, use a rafter as a guide **(Fig 7)**.

Secure the front purlin to the Gallows brackets using the metal angled brackets, pilot drill and fix using 35mm screw supplied **(Fig 8)**.

Fig.1



Fig.2

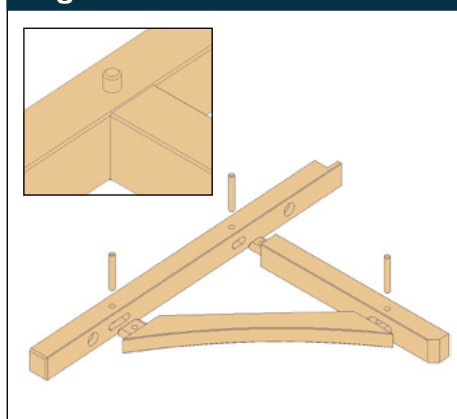


Fig.3

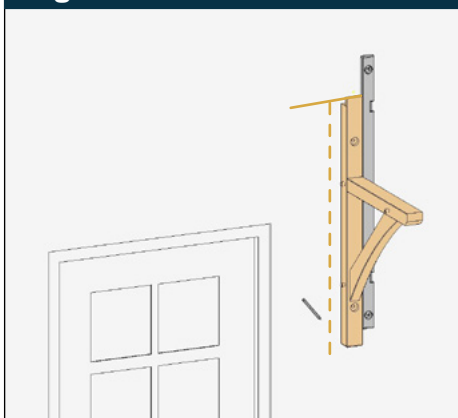


Fig.4

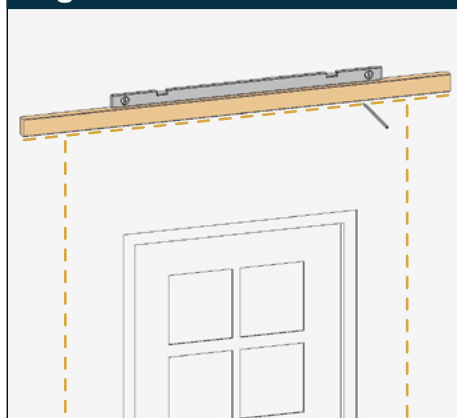


Fig.5

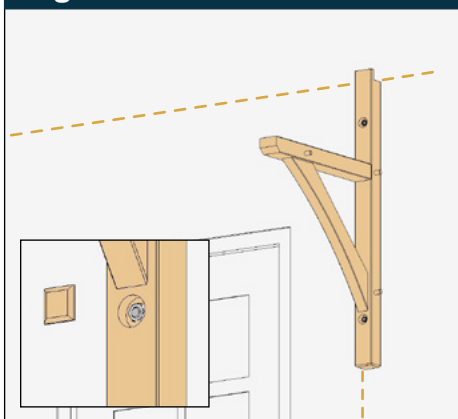



Fig.6





Fig.7



Fig.8

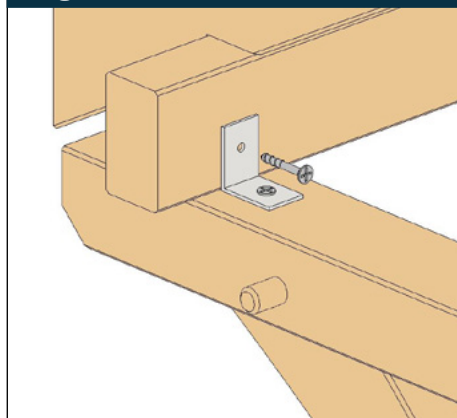

Measure and space the rafters out equally along the frame. Pilot drill through into purlins and fix rafters top and bottom using 100mm screw supplied (**Fig 9**).

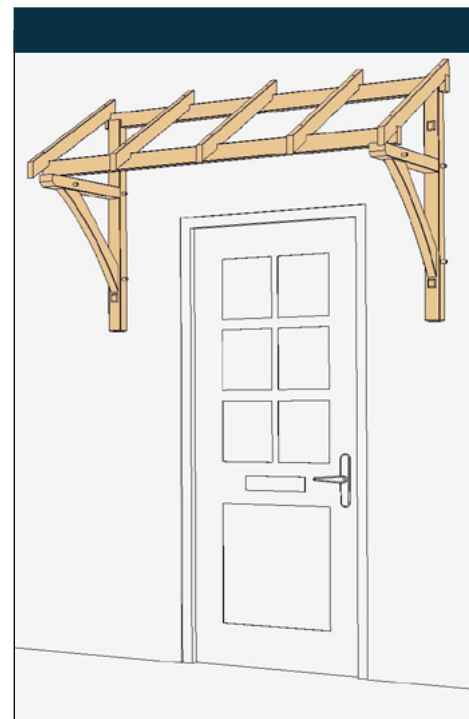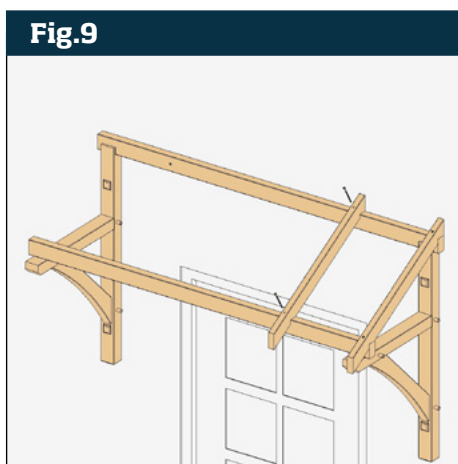

Info

- Canopy tested to hold a weight loading of 50kg/m².
- Maintenance - we recommend that you retreat your Porch Canopy and Accessories Kits annually by cleaning and repainting, staining or varnishing, always following the manufacturer's recommendations.
- Fascias, roofing, finishing components, exterior glue and wall fixings are not included.

CHESHIRE
mouldings
TRADE

Technical Helpline:
Freephone
0800 085 3475

